Installation Instructions



TH Series Double Clamps

This general installation instruction applies to all Rosenberger TH series Double Clamps.




Typical Application

Material List: Each kit includes 10 sets of Double Clamp Support Blocks

Required Tools: (2) 9/16" Wrenches

Recommended Torque: 8 ft-lbs | 11 Nm Maximum Torque: 10 ft-lbs | 14 Nm

**Maximum Stack Height: 3

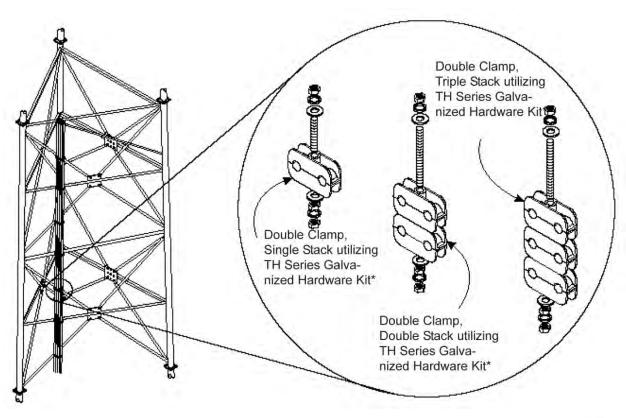

Part #	Description	QTY
TH494-DC12	Double Clamp to suit 1/2" Corrugated Cable	10
TH495-DC78	Double Clamp to suit 7/8" Corrugated Cable	10
TH496-DC114	Double Clamp to suit 1-1/4" Corrugated Cable	10
TH497-DC158	Double Clamp to suit 1-5/8" Corrugated Cable	10
TH498-DC214	Double Clamp to suit 2-1/4" Corrugated Cable	10
TH499-DC38	Double Clamp to suit 3/8" Corrugated Cable	10



When installed properly, this product meets the requirements for installation in High Risk PIM Zones. Static and dynamic testing was conducted per IEC 46/666 "Passive RF and Microwave Devices, Intermodulation Level Measurement", "Part 8: Measurement of passive intermodulation generated by objects exposed to RF radiation" and IEC 62037-1.

Phone: (337)598-5250 Ve Fax: (337) 598-5290

Web: www.RosenbergerOnline.us

Version 112718

Page **1** of **1**