


## Installation Instructions

1. Compress the ends of the Hoisting Grip together and slide onto the cable (see photo). Fully extend the Hoisting Grip on the cable to tighten.

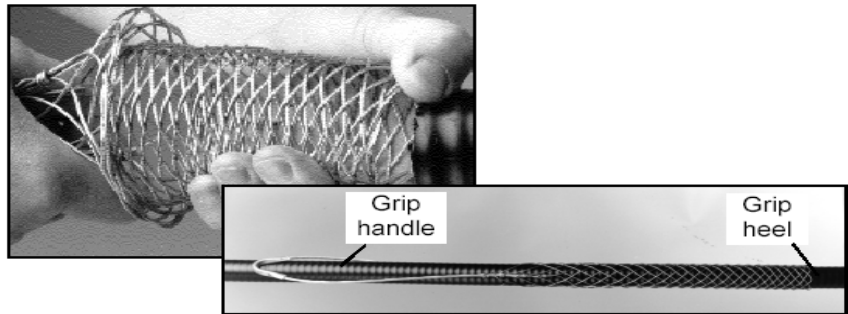

2. Place the Hoisting Grip(s) at the proper location on the cable before attaching the connector. Allow a sufficient length of cable to reach the antenna input when cable hoisting and attachment of the grip handle is completed.

3. Securely attach the provided clamp with a crimping tool at the grip heel of each Hoisting Grip as shown below.



4. Attach the hoist line to the Hoisting Grip as shown. Apply tension slowly to the hoist line, allowing the Hoisting Grip(s) to tighten uniformly on the cable.

